Mac mini™ Mounting Bracket Installation Instructions

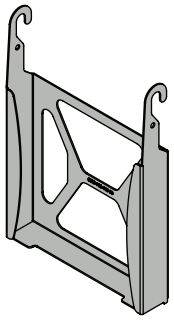

The Mac mini™ Mounting Bracket is the perfect accessory for securely holding a Mac mini™ behind any of Premier Mounts' CTM, PCM and PRO Tilt Series mounts (sold separately).

PREMIER MOUNTS®
CREATING POSITIVE CUSTOMER EXPERIENCES

3130 East Miraloma Avenue
Anaheim, CA 92806 USA
USA and Canada
Phone: 1.800.368.9700
Fax: 1.800.832.4888

Other Locations – Phone: (001).714.632.7100; Fax: (001).714.632.1044 ©Premier Mounts 2010

Parts List

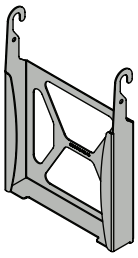 Mac mini™ Mounting Bracket (Qty 1)	 PaneLock™ Security Hook (Qty 2)
 M5 Allen Wrench (Qty 1)	 M6 x 12mm Lock-It™ Security Screw (Qty 2)

Step 1

Place the Mac mini™ facedown in the slot of the Mac mini™ Mounting Bracket.

The Mac mini™'s DVD drive should be accessible from the bottom of the mounting bracket.

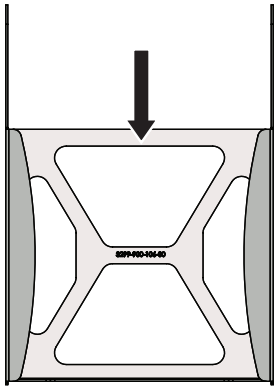

Front View

Step 3

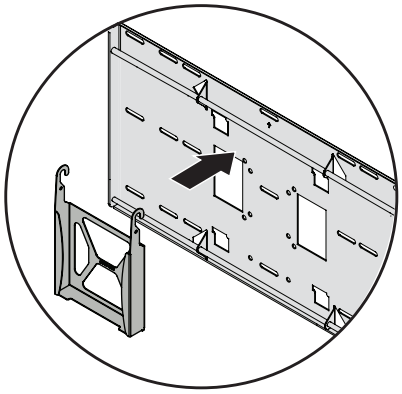

Hook the Mac mini™ Mounting Bracket on the top mounting bar of the mount
(Mac mini™ not shown).

The mount must be installed before attaching the Mac mini™ Mounting Bracket.

If using the mounting bracket with a PRO tilt mount, the bottom tabs of the mounting bracket should lock behind the bottom hooks of the back plate.

Step 4

Slide a PaneLock™ security hook on the top mounting bar, placing it on the outside edge of the Mac mini™ Mounting Bracket.

Make sure the PaneLock™ security hook is facing the same direction as shown.

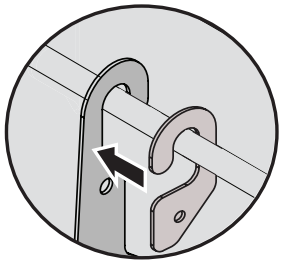

Step 5

Insert and tighten one (1) M6 x 12mm Lock-It™ security screw to attach the PaneLock™ security hook to the Mac mini™ Mounting Bracket.

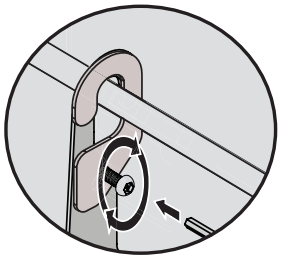

Step 6

Repeat steps 4 and 5 to attach the remaining PaneLock™ security hook on the other side of the Mac mini™ Mounting Bracket.

When finished, the mounting bar of the mount will effectively lock the Mac mini™ in place and prevent theft.

• All trademarks are the property of the respective trademark owners.